




# HONDA TALON R


803-01-614 FRONT - 803-01-615 REAR  
COMFORT SPRING SPECIFICATION

## FRONT

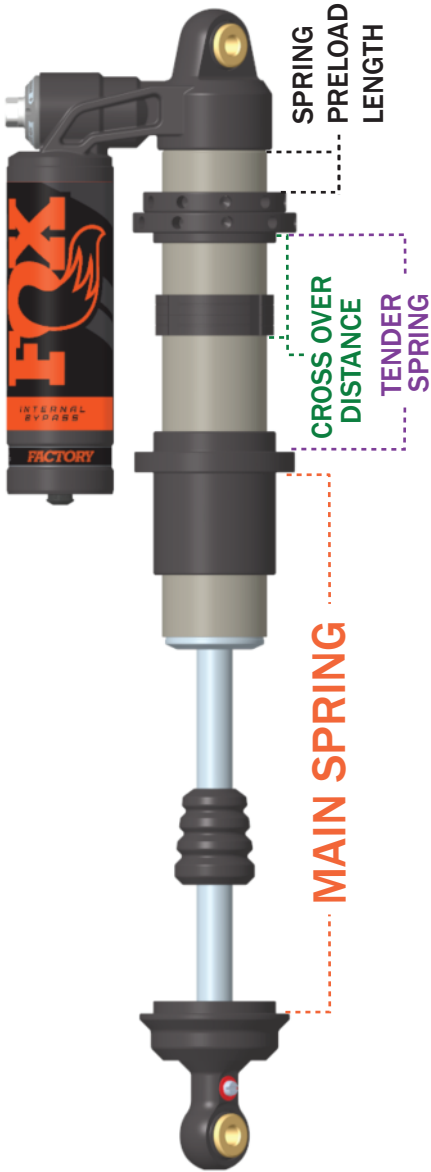

885-08-500  
985-08-500 R  
985-08-501 L

## REAR

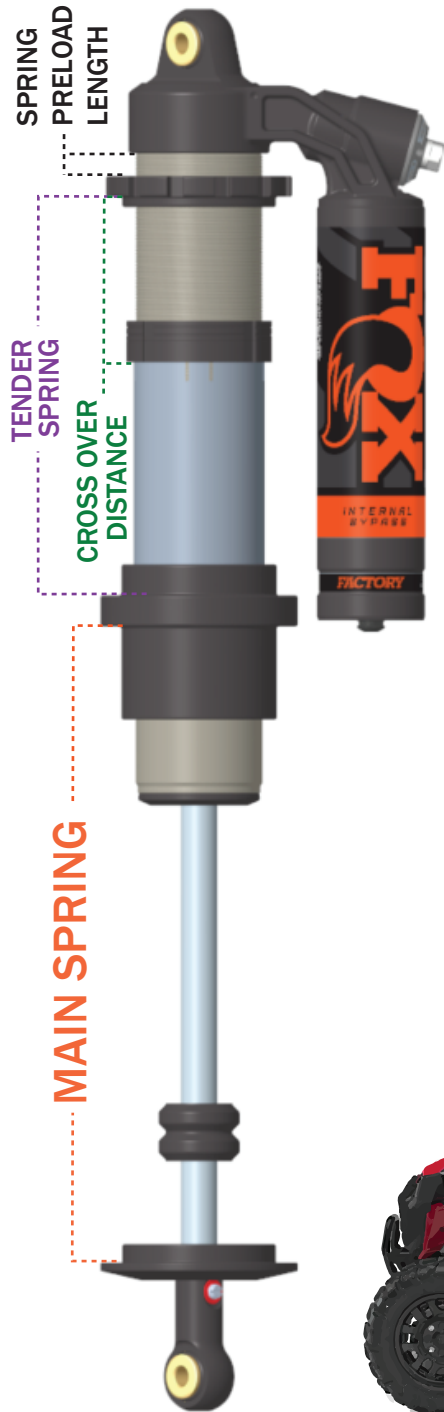

885-08-502  
985-08-502 R  
985-08-503 L

## FRONT

**MAIN** = 14" x 175 lb/in  
039-38-175-A  
**TENDER** = 6" x 200 lb/in  
039-83-200-1  
SPRING PRELOAD LENGTH = 1"  
**CROSS OVER DISTANCE** = 2 1/2"  
RIDE HEIGHT = 14"

## REAR

**MAIN** = 16" x 200 lb/in  
033-23-200-1  
**TENDER** = 6" x 250 lb/in  
039-49-250-A  
SPRING PRELOAD LENGTH = 1/2"  
**CROSSOVER DISTANCE** = 4"  
RIDE HEIGHT = 14"

**NOTE:**  
Jack the vehicle up off the ground to fully extend shocks to replace springs. Shocks have internal negative spring, compress by pushing down on the wheel.

When checking : RIDE HEIGHT  
Push down on front and rear of the machine 3 times, then roll the machine forward and backwards a couple of feet to remove wheel scrub and seat springs.

Ride height measurements with stock tires and rims.



Measure Ride Height  
at each end of flat section  
of the frame.