




## KAWASAKI KRX

803-01-620 FRONT - 803-01-621 REAR  
COMFORT SPRING SPECIFICATION


### FRONT

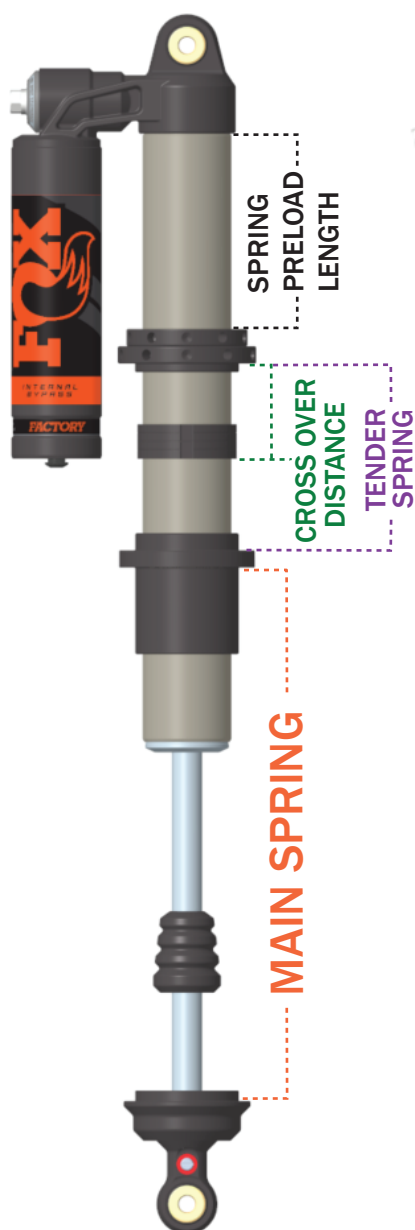

885-08-508

985-08-508 R & L

### REAR

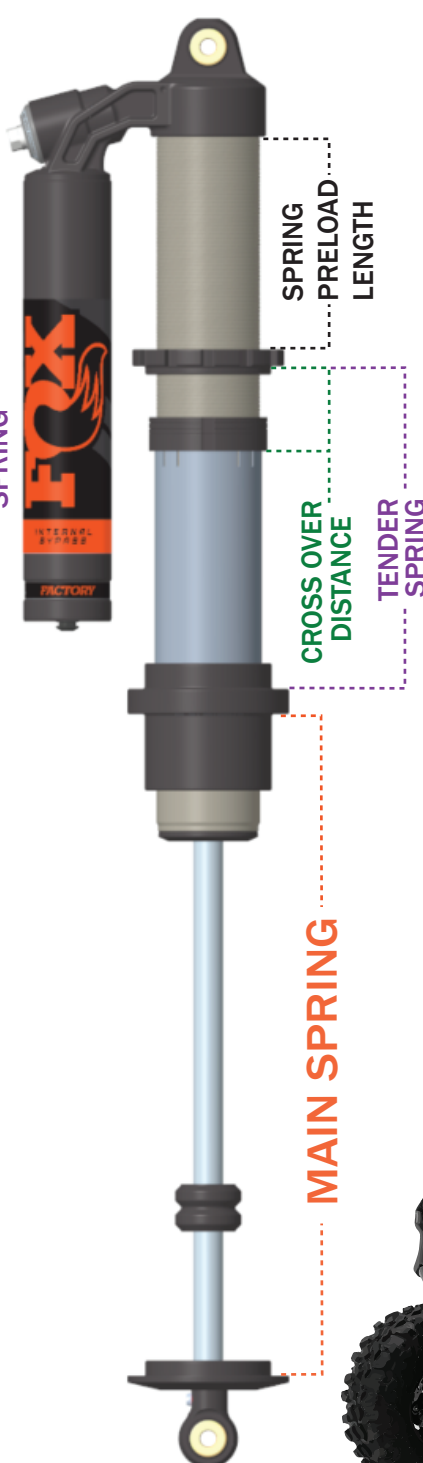

885-08-509

985-08-509 R & L

### FRONT

**MAIN** = 16" x 250 lb/in

**039-39-250-A**

**TENDER** = 6" x 300 lb/in

**039-83-300-1**

**SPRING PRELOAD LENGTH** = 5 5/8"

**CROSS OVER DISTANCE** = 2 3/4"

**RIDE HEIGHT** = 14"

### REAR

**MAIN** = 20" x 200 lb/in

**039-46-200-A**

**TENDER** = 10" x 100 lb/in

**039-49-100-A**

**SPRING PRELOAD LENGTH** = 6 1/4"

**CROSSOVER DISTANCE** = 1 3/4"

**RIDE HEIGHT** = 14"

#### NOTE:

Jack the vehicle up off the ground to fully extend shocks to replace springs. Shocks have internal negative spring, compress by pushing down on the wheel.

When checking : RIDE HEIGHT

Push down on front and rear of the machine 3 times, then roll the machine forward and backwards a couple of feet to remove wheel scrub and seat springs.

Ride height measurements with stock tires and rims.



Measure Ride Height  
at each end of flat section  
of the frame.